

Klipsch

COURTYARD 4.1

LANDSCAPE SPEAKER SYSTEM











LEGENDARY
AMERICAN
SOUND



 SINCE 1946



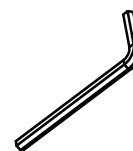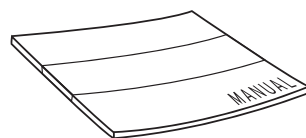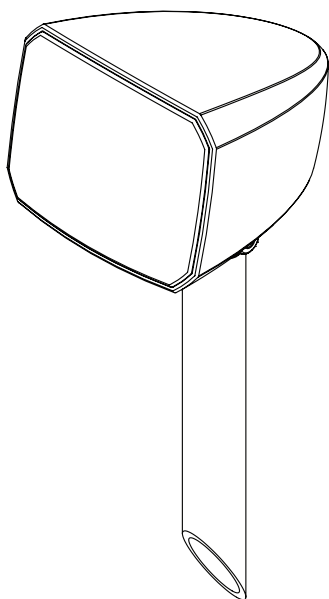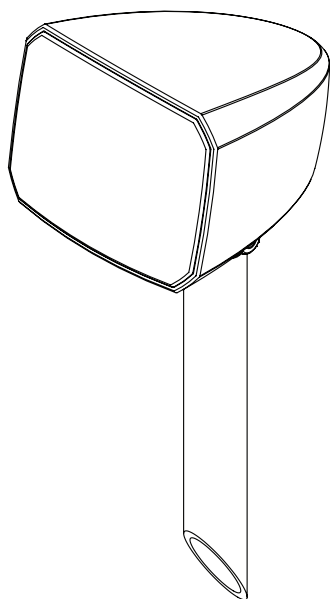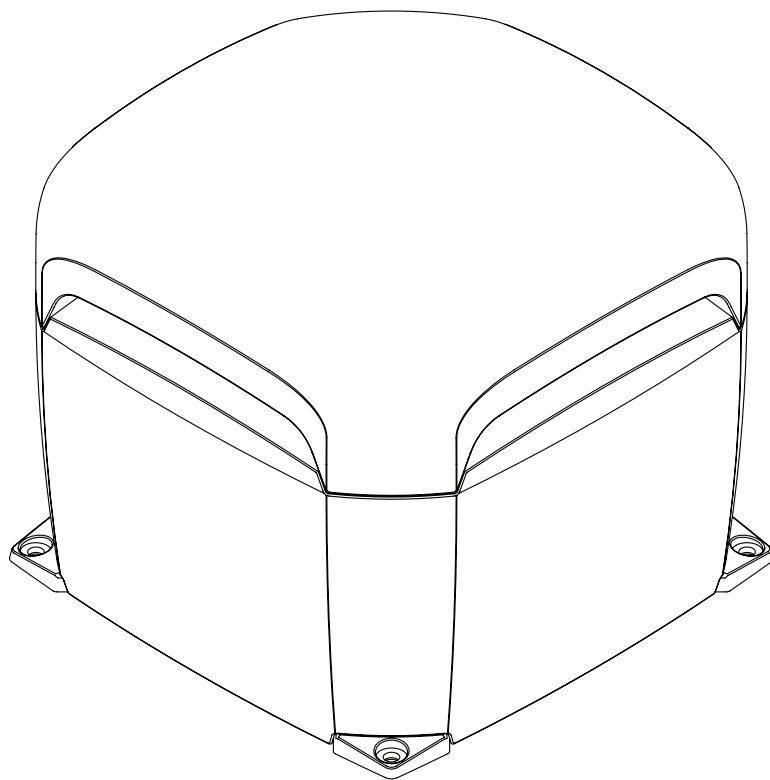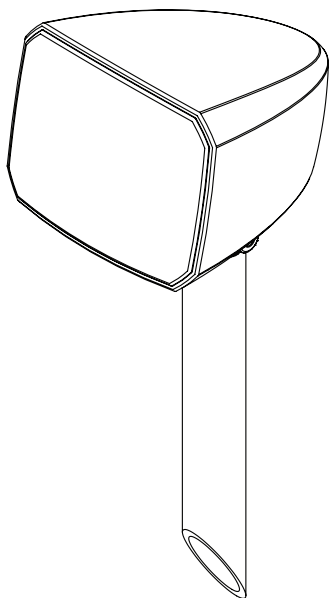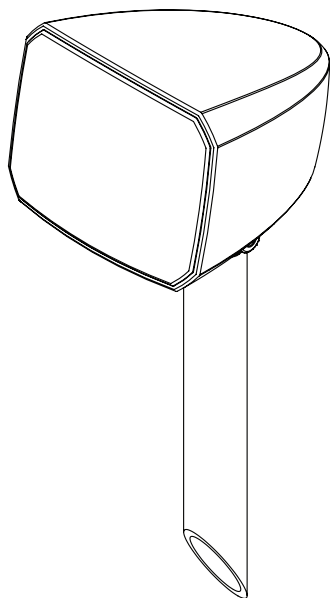

Required Tools (Not Included)

Wire Strippers

Shovel

Rubber Mallet

Burial-Rated Speaker Wire

Suggested Speaker Wire


Use burial-rated wire when installing your speakers. Use 16 or better gauge wire for up to 100 foot installations, 14 or better gauge wire for 100 to 200 foot installations, and 12 or better gauge wire for 200 to 300 foot installations. Using smaller wire than the recommended can degrade the performance of the speakers over longer distances. Below is an estimated signal loss chart based on distance and gauge of wire used.

Wire Gauge	>20% Power Loss
12	~625 feet
14	~400 Feet
16	~250 Feet
18	~200 Feet

Nominal Impedance Chart


The chart below shows the nominal impedance for installations using a standard multichannel or 2-channel amplifier.

4.1	8 ohm
6.1	6 ohm
8.1	4 ohm
8.2	3.5 ohm

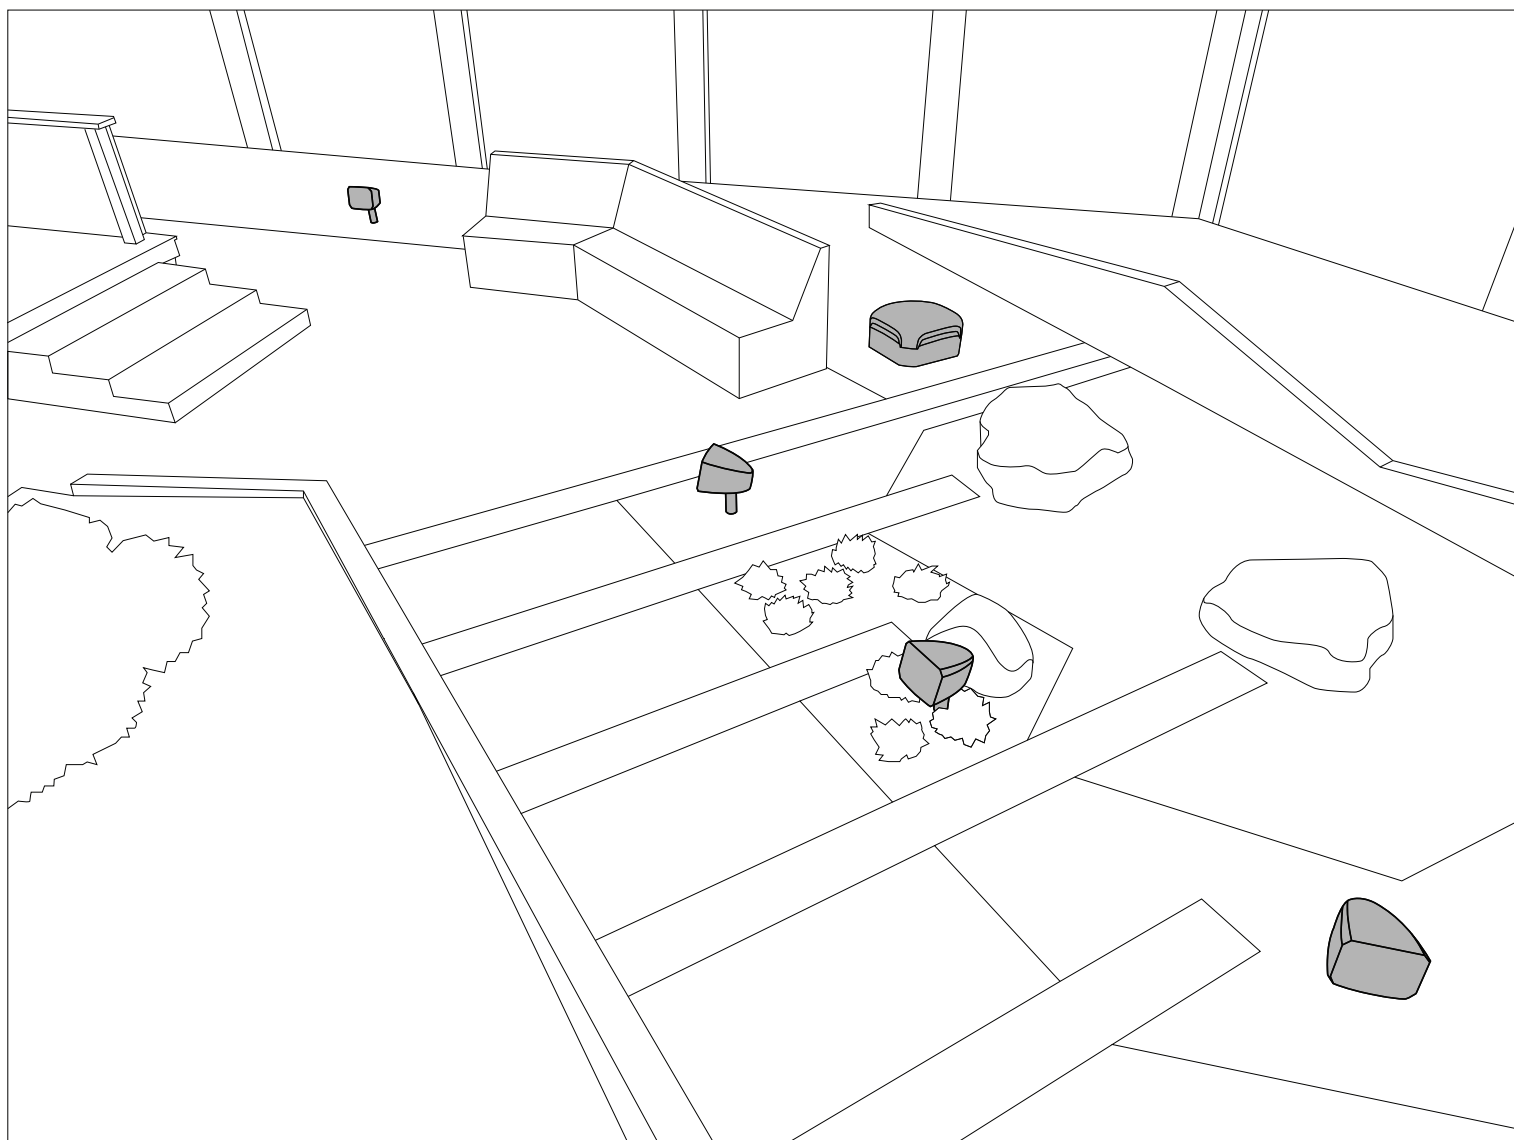


Satellite Speakers

1. Place the satellites and subwoofer in their approximate final locations, with satellites being about 8 to 10 feet apart from each other.
2. Dig a 5" trench to run the speaker wires in. Be sure to check local codes for trenching limitations.
3. Run your speaker wire through the trench from the amp to the first speaker location.

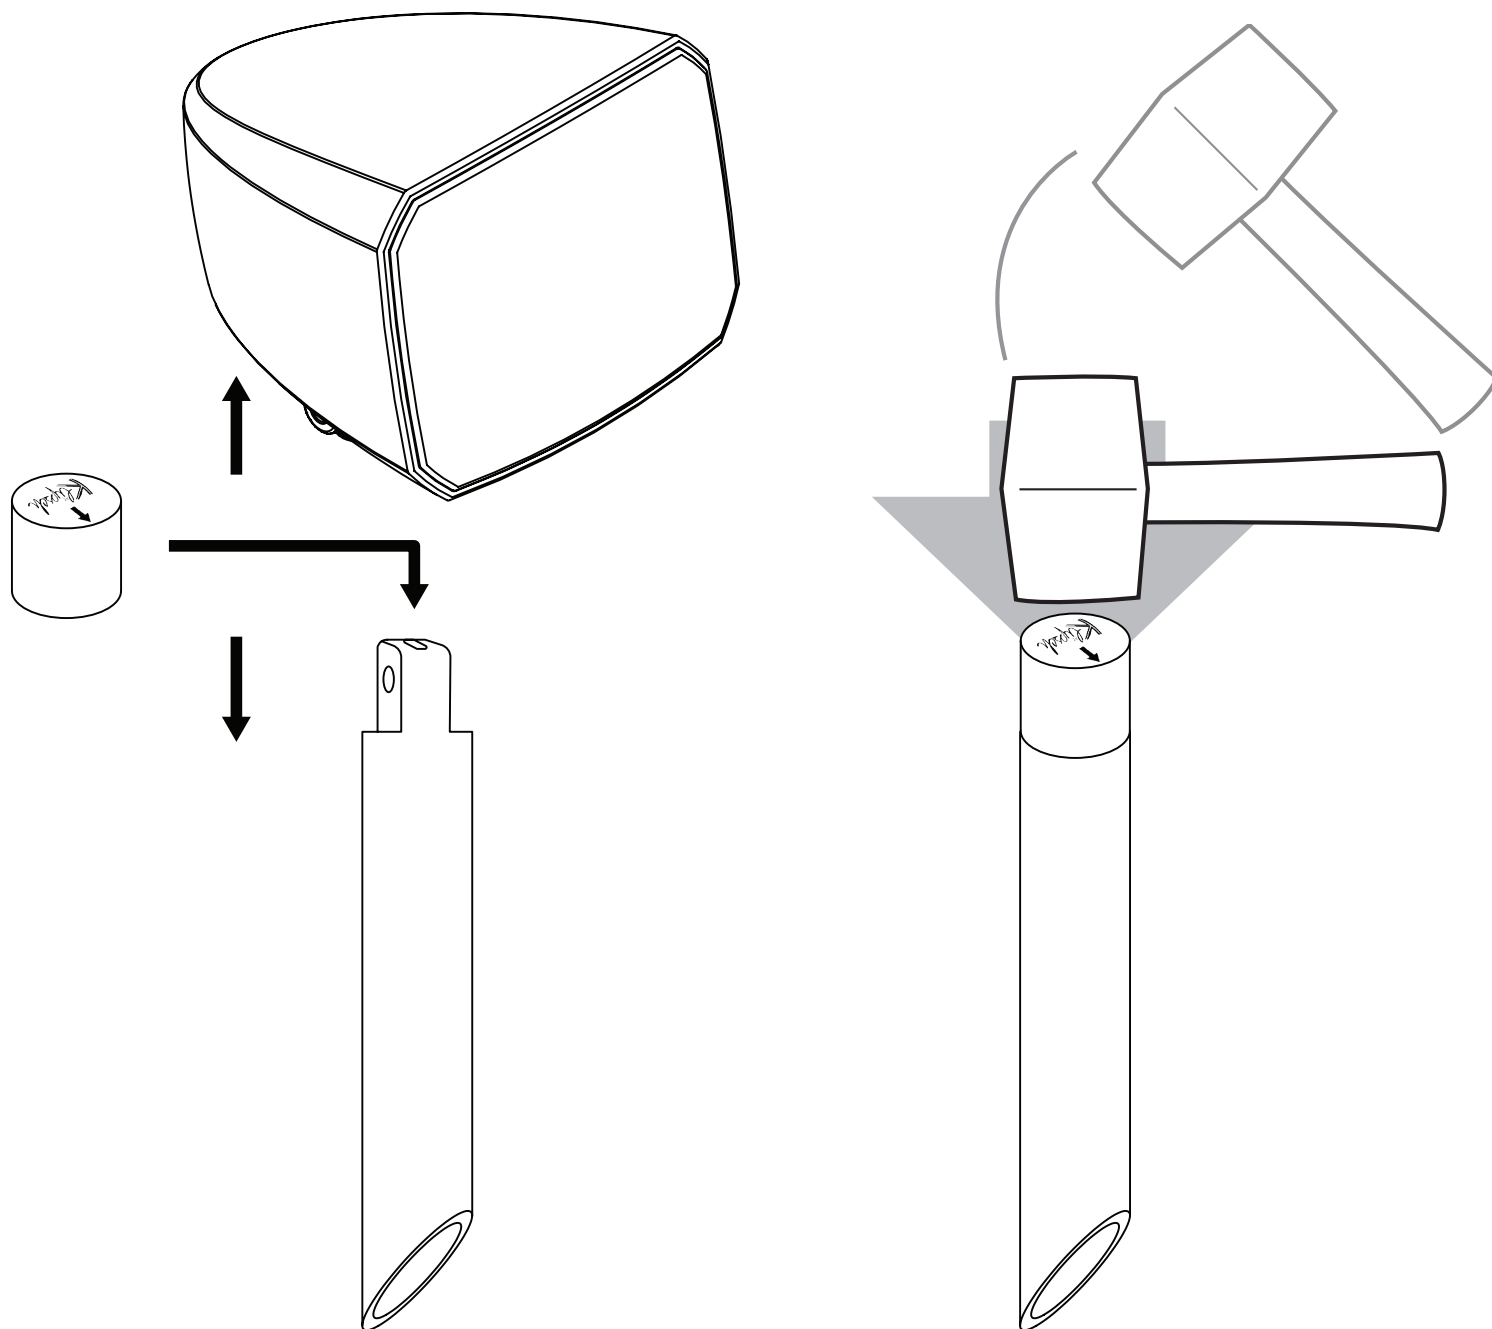


Satellite Speakers

Remove the speaker head from the stake, and place the included hammer cap onto the stake with the arrow facing the direction the speaker will be facing. Use the rubber mallet to drive the stake into the ground, leaving enough room to thread the wires from the speaker head through the hole in the stake.

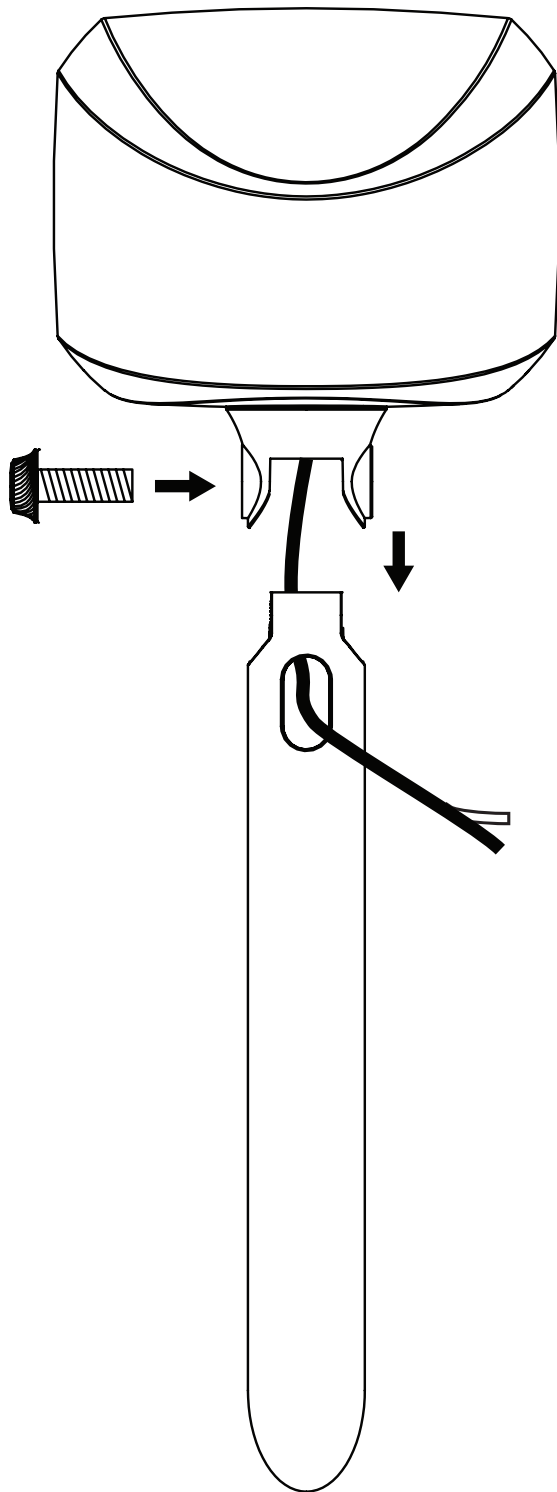


Satellite Speakers

Feed the wire through the top of the stake and out through the hole in the back of the stake. Then reattach the speaker head to the stake using the bolt and allen wrench.

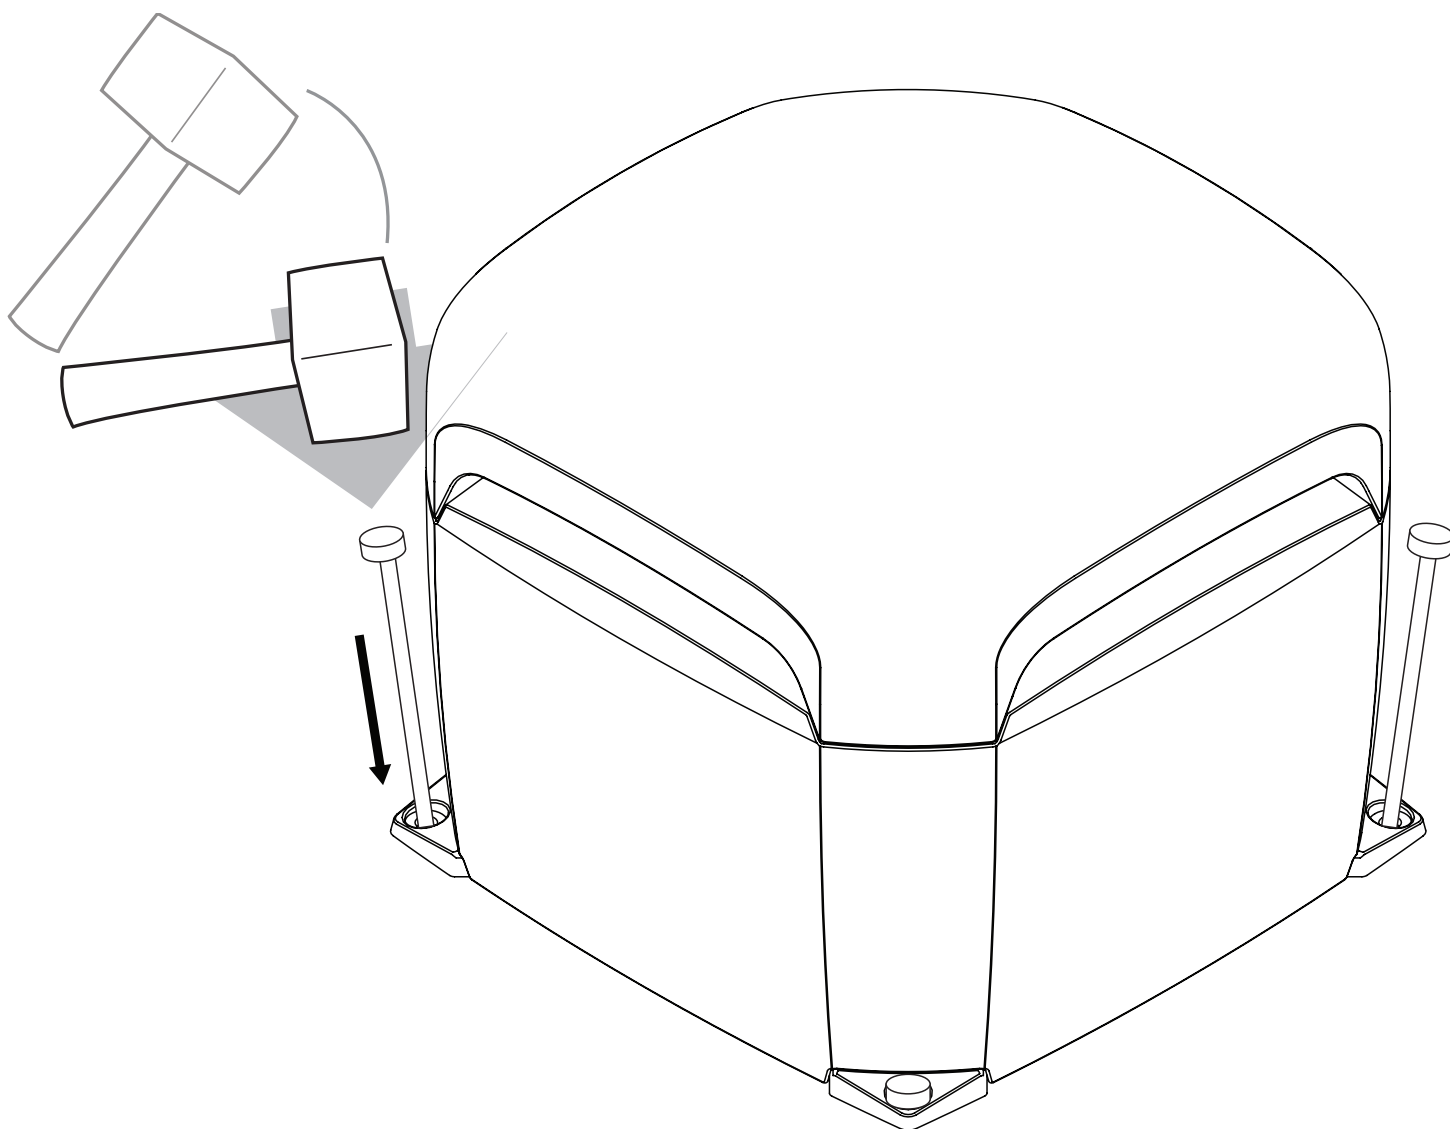


Subwoofer

After digging a hole that the subwoofer can be placed approximately halfway into or placing the subwoofer on the ground, use the included tent stakes and a rubber mallet to secure the subwoofer to the ground. This step is not required if just placing on concrete or a wooden deck.

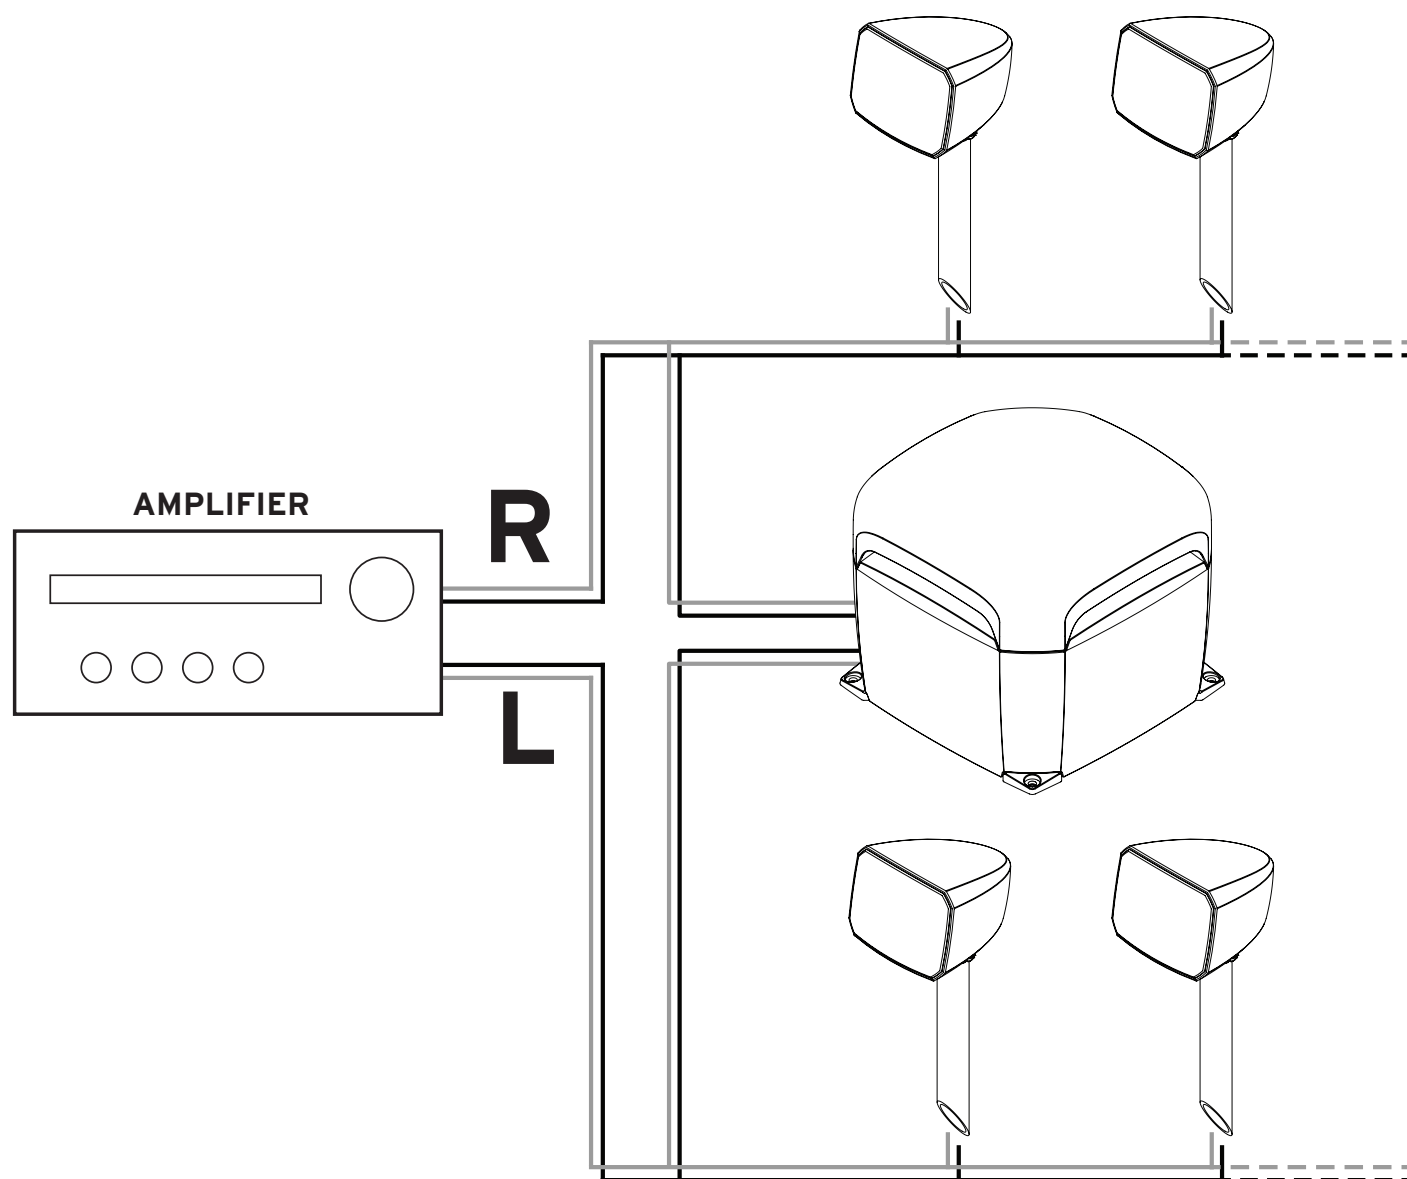

Wiring

Power off your amplifier before making any wired connections. The subwoofer can be placed at any point in the daisy-chain, with the middle being recommended on standard placements for balance. The system can be expanded with up to four additional satellites (sold separately.)

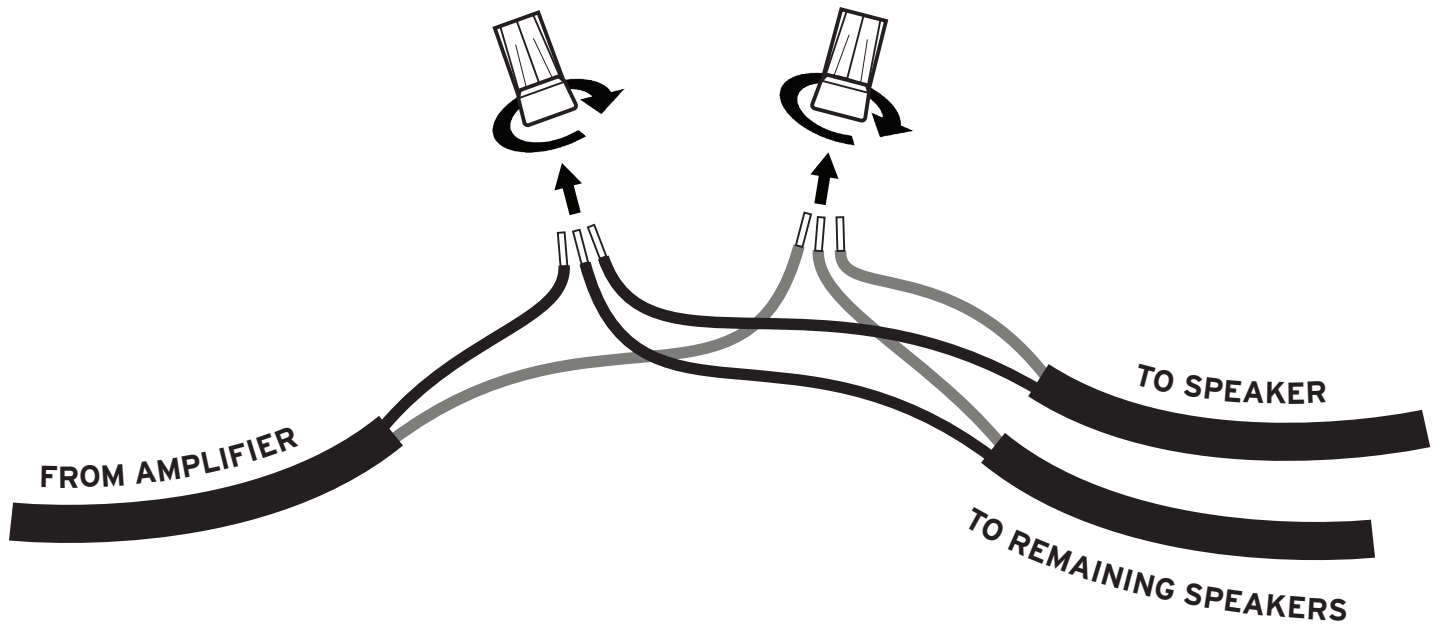

Wiring

1. Bundle the three LEFT channel positive (+) wires together and secure them using the included silicon wire nuts.
2. Repeat step 1 for all Left channel negative (-) wires.
3. Run the wires to the next satellite and connect the RIGHT positive (+) and negative (-) wires.
4. Repeat connecting each speaker, alternating LEFT then RIGHT, until you reach the subwoofer.
5. Connect the LEFT positive (+) and negative (-) channels from the subwoofer to the chain, and also the RIGHT positive (+) and negative (-) channels from the subwoofer to the chain.
6. Continue the chain connecting the rest of the speakers and connect the wires to the amplifier.
7. When everything is wired, turn on your amplifier and test that all speakers are functioning correctly.
8. Bury/fill in the wire trenches and the space around the subwoofer if required.

LIMITED WARRANTY INDOOR-OUTDOOR SPEAKERS

Applicable to Klipsch Indoor-Outdoor Speaker
Products created after April, 2017.

United States

Klipsch Group, Inc., (KGI), 3502 Woodview Trace, Suite 200, Indianapolis, Indiana (USA) 46268, warrants to the original retail purchaser that this product will be free from defective materials and workmanship for five (5) years from the date of purchase, subject to the limitations below. This warranty period is not extended if we repair or replace the product. Except as limited below, if this product proves defective in either material or workmanship, KGI, at its option, will (a) repair the product, or (b) replace the product, at no charge for parts or labor. If the product model is no longer available and cannot be repaired effectively or replaced with an identical model, KGI at its sole option may replace the unit with a current model of equal or greater value. In some cases, modification to the mounting surface may be required where a new model is substituted. KGI assumes no responsibility or liability for such modification. To obtain a repair or replacement under the terms of this warranty, you must return the product to the dealer from which it was purchased with your original receipt. If return of the product to the dealer from which it was purchased is impossible, you must contact our warranty service number at 1-800-554-7724 to arrange for return of the product to us or in-field destruction of the product at our option, as well as provision of your original receipt to us. Return, repair, and replacement shipping, liability, and cost is the responsibility of the original retail purchaser.

Limitations:

- This limited warranty does not cover failure of the product arising, in whole or in part, from improper installation, storage, transportation, misuse, abuse, accident, neglect, mishandling, unauthorized repair, modification, or wear from ordinary use or environmental deterioration.
- This limited warranty does not cover cosmetic damage, including paint damage, or consequential damage to other components or premises which may result for any reason from the failure of the product.
- This limited warranty is null and void for products not used in accordance with KGI's instructions.
- This limited warranty is null and void for products with altered or missing serial numbers and for products not purchased from Klipsch Group, Inc. or an authorized dealer (See: www.klipsch.com/dealers).
- This limited warranty terminates if the original retail purchaser sells or otherwise transfers this product.
- This limited warranty is null and void for defects or damage caused by installation or repair performed by any person or entity other than a Klipsch authorized installer or dealer.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE, JURISDICTION TO JURISDICTION OR COUNTRY TO COUNTRY. ALL EXPRESS AND IMPLIED WARRANTIES FOR THE PRODUCT, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN TIME TO THE TERM OF THIS WARRANTY. SOME STATES, JURISDICTIONS OR

COUNTRIES DO NOT ALLOW THE EXCLUSION OF CERTAIN IMPLIED WARRANTIES OR CONDITIONS, OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY OR CONDITION LASTS, SO THIS LIMITATION MAY NOT APPLY TO YOU. KGI'S RESPONSIBILITY FOR MALFUNCTIONS AND DEFECTS IN HARDWARE IS LIMITED TO REPLACEMENT OR REPAIR AS SET FORTH IN THIS WARRANTY STATEMENT. KGI DOES NOT ACCEPT LIABILITY FOR SPECIAL, PUNITIVE, CONSEQUENTIAL OR INCIDENTAL DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT, INCLUDING WITHOUT LIMITATION, ANY LIABILITY FOR THIRD PARTY CLAIMS AGAINST YOU FOR DAMAGES OR LOSSES OR FOR PRODUCTS NOT BEING AVAILABLE FOR USE. THE MAXIMUM LIABILITY FOR WHICH KGI MAY BE RESPONSIBLE WILL BE NO MORE THAN THE AMOUNT YOU PAID FOR THE PRODUCT THAT IS THE SUBJECT OF THE CLAIM. SOME STATES, JURISDICTIONS OR COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

WARRANTY OUTSIDE THE U.S.

The Warranty on this product shall comply with applicable law when sold to a consumer outside of the United States. To obtain any applicable warranty service, please contact the dealer from which you purchased this product, or the distributor that supplied this product.

Klipsch®

KEEPERS OF THE SOUND™

3502 WOODVIEW TRACE, INDIANAPOLIS, IN, USA

[KLIPSCH.COM/PRO](https://www.klipsch.com/pro)

Copyright ©2025 Premium Audio Company, LLC, a wholly owned subsidiary of Gentex Corporation (NASDAQ: GTX).
KLIPSCH GROUP, INC. ALL RIGHTS RESERVED. Klipsch Group, Inc. is a wholly owned subsidiary of Vox International Corporation. Klipsch and KLIPSCH KEEPERS OF THE SOUND are trademarks registered in the USA and other countries, and are owned by Klipsch Group, Inc.

V03 - 250527